



OICE




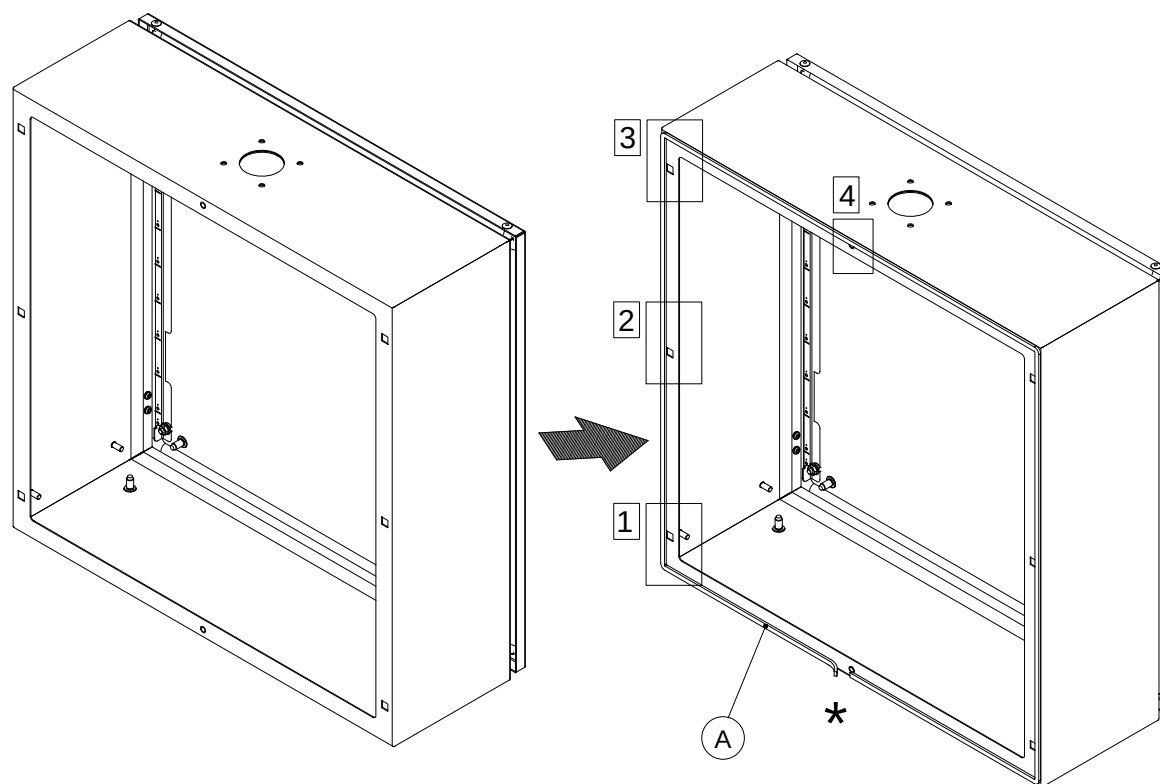


Ref.	Pic.	Qty.
A		1
B		4/6
C		4/6
D	 M5x16	4/6/8
E		2
F		2
G	 4.8x25	4
H		2
I		2
J		2

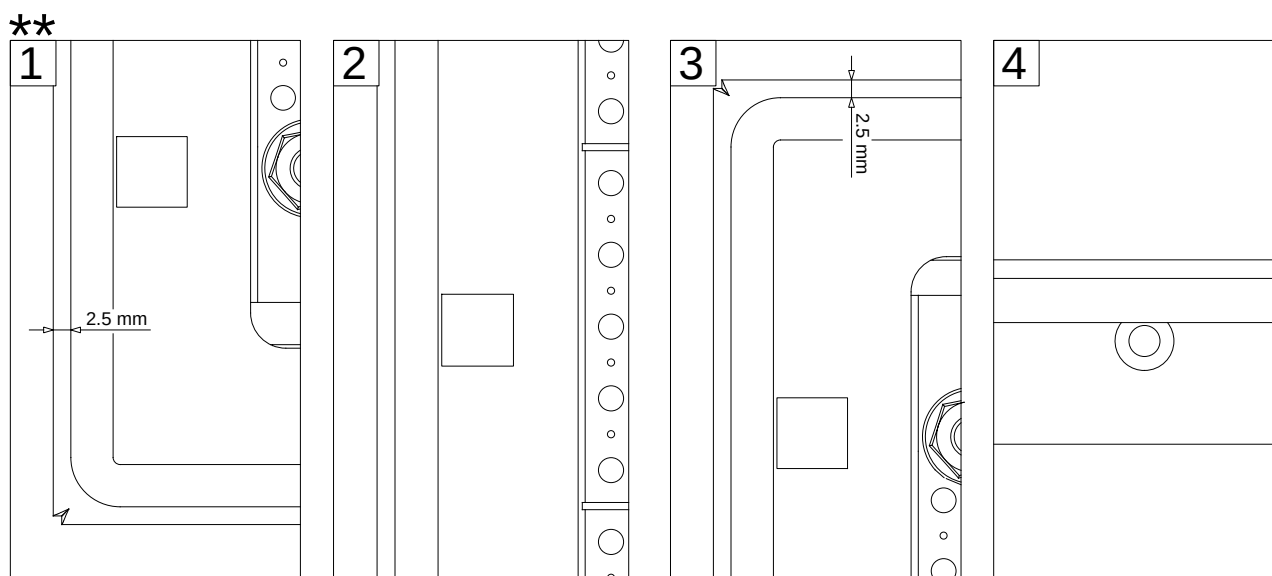


*Start applying the gasket from the indicated zone with the asterisk.


**Do not cover the square holes with the gasket.

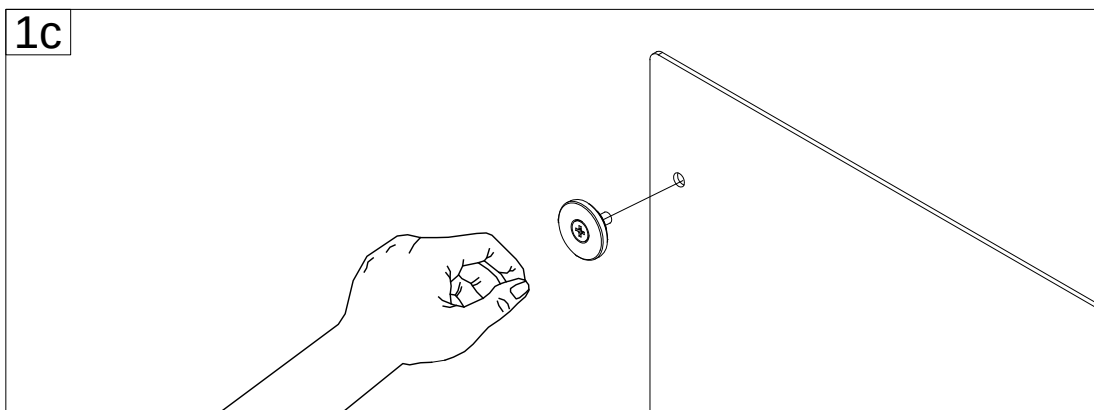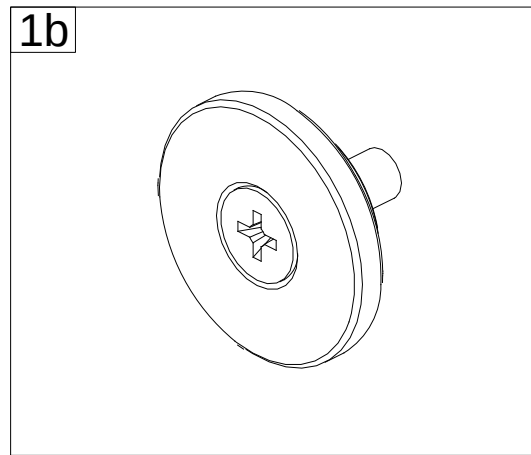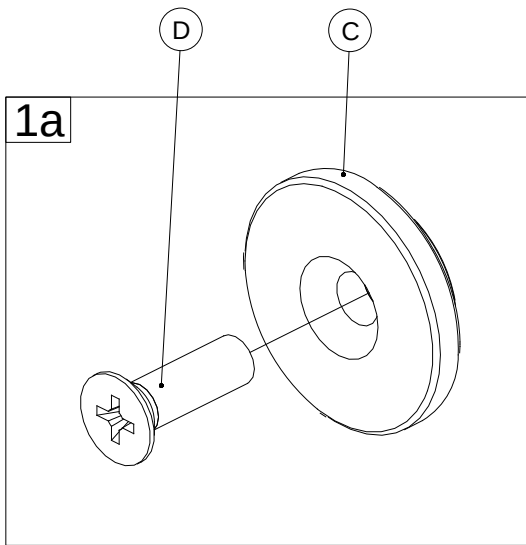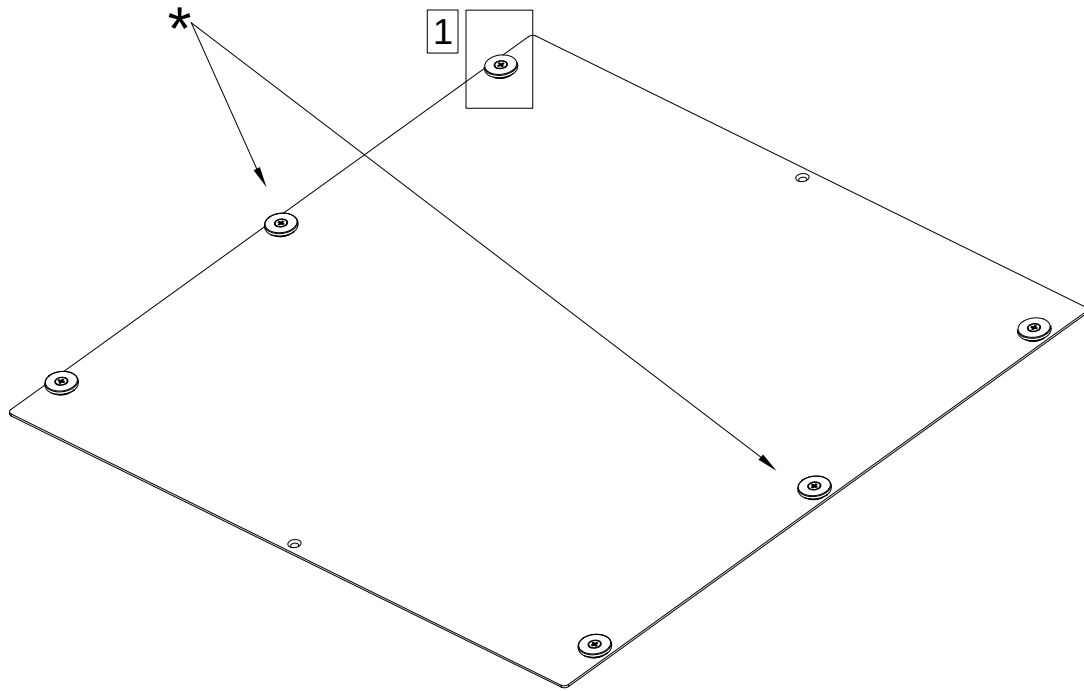

*Only for 500 (H) and above.

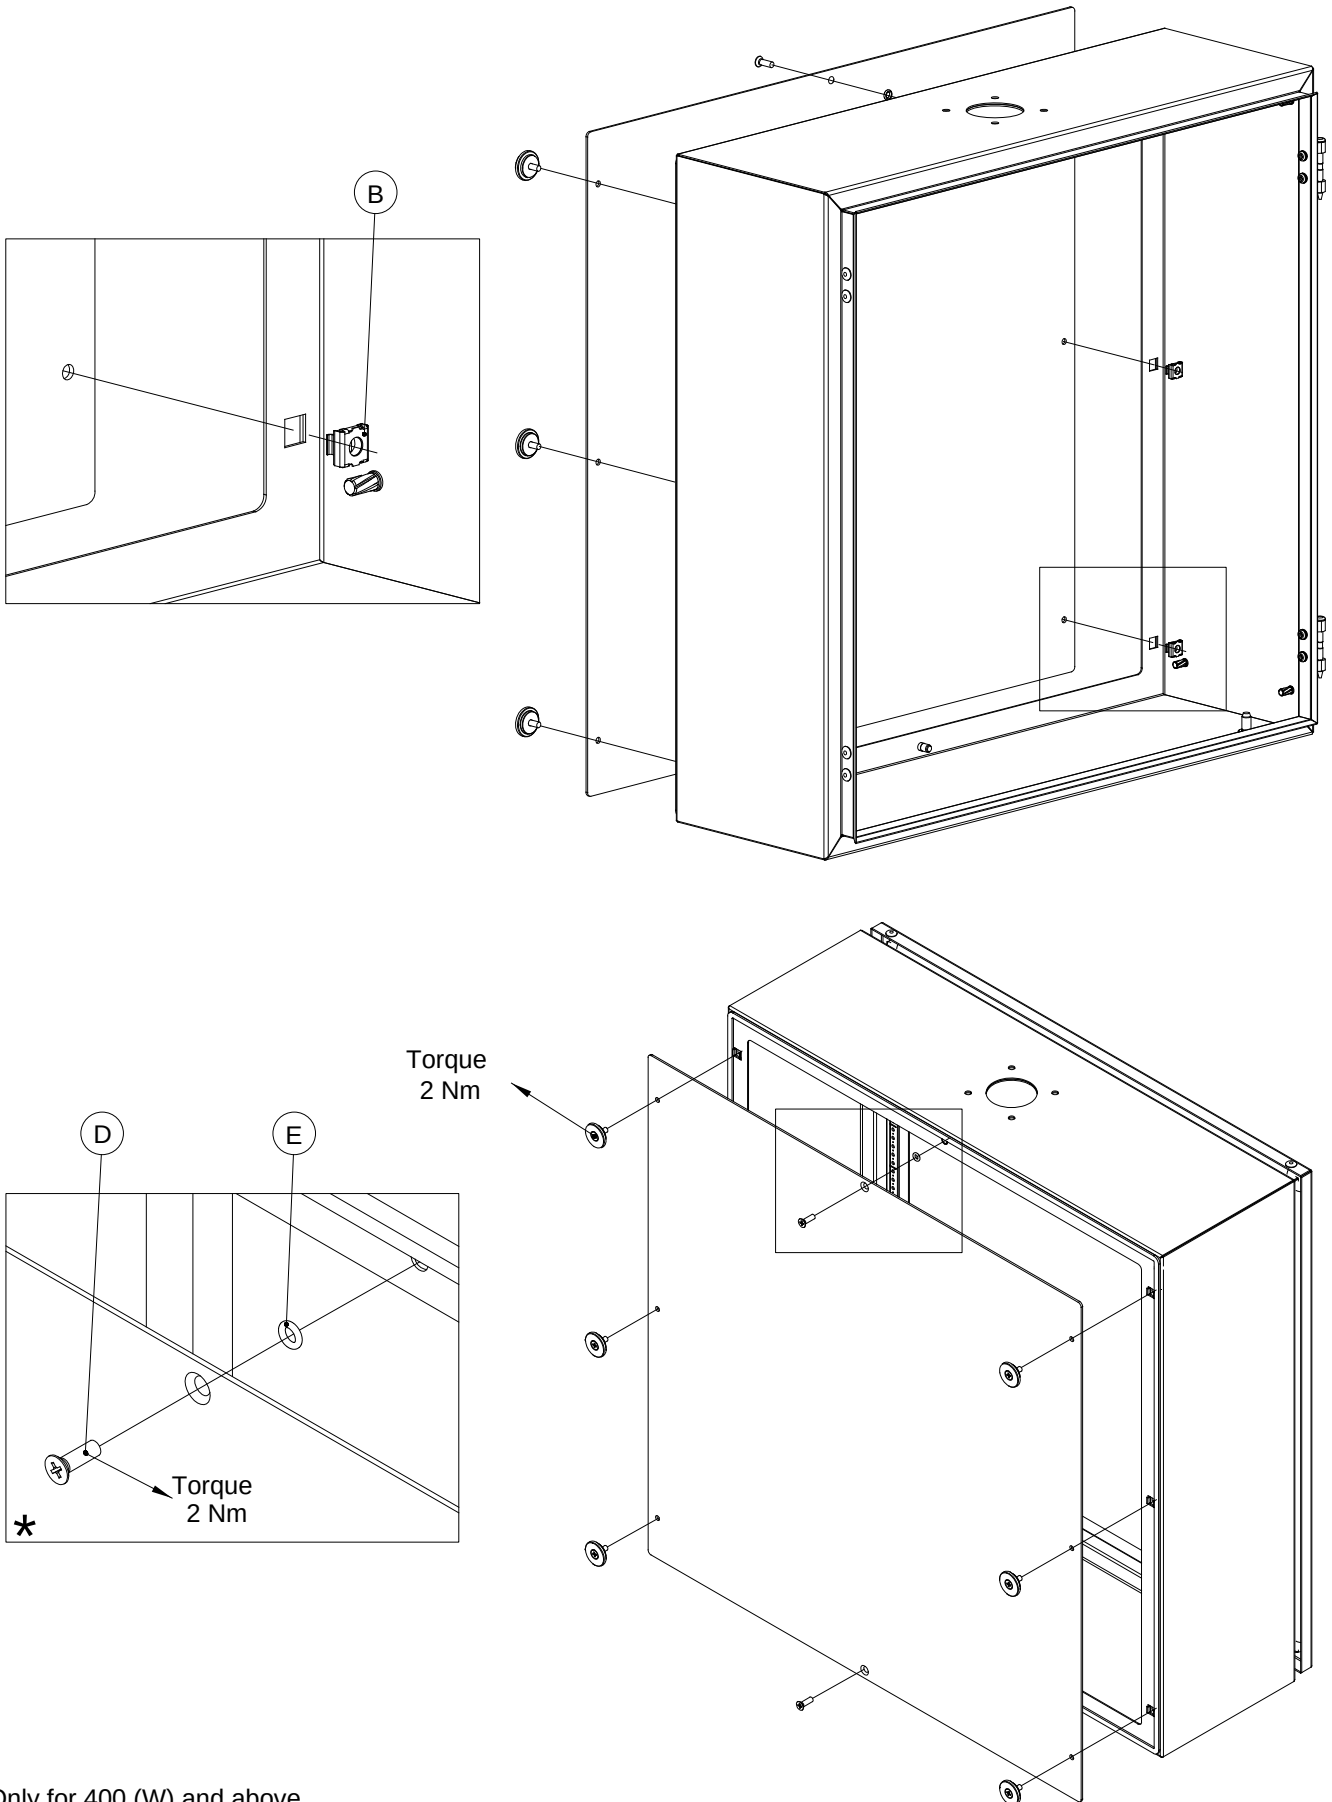

*Only for 400 (W) and above.

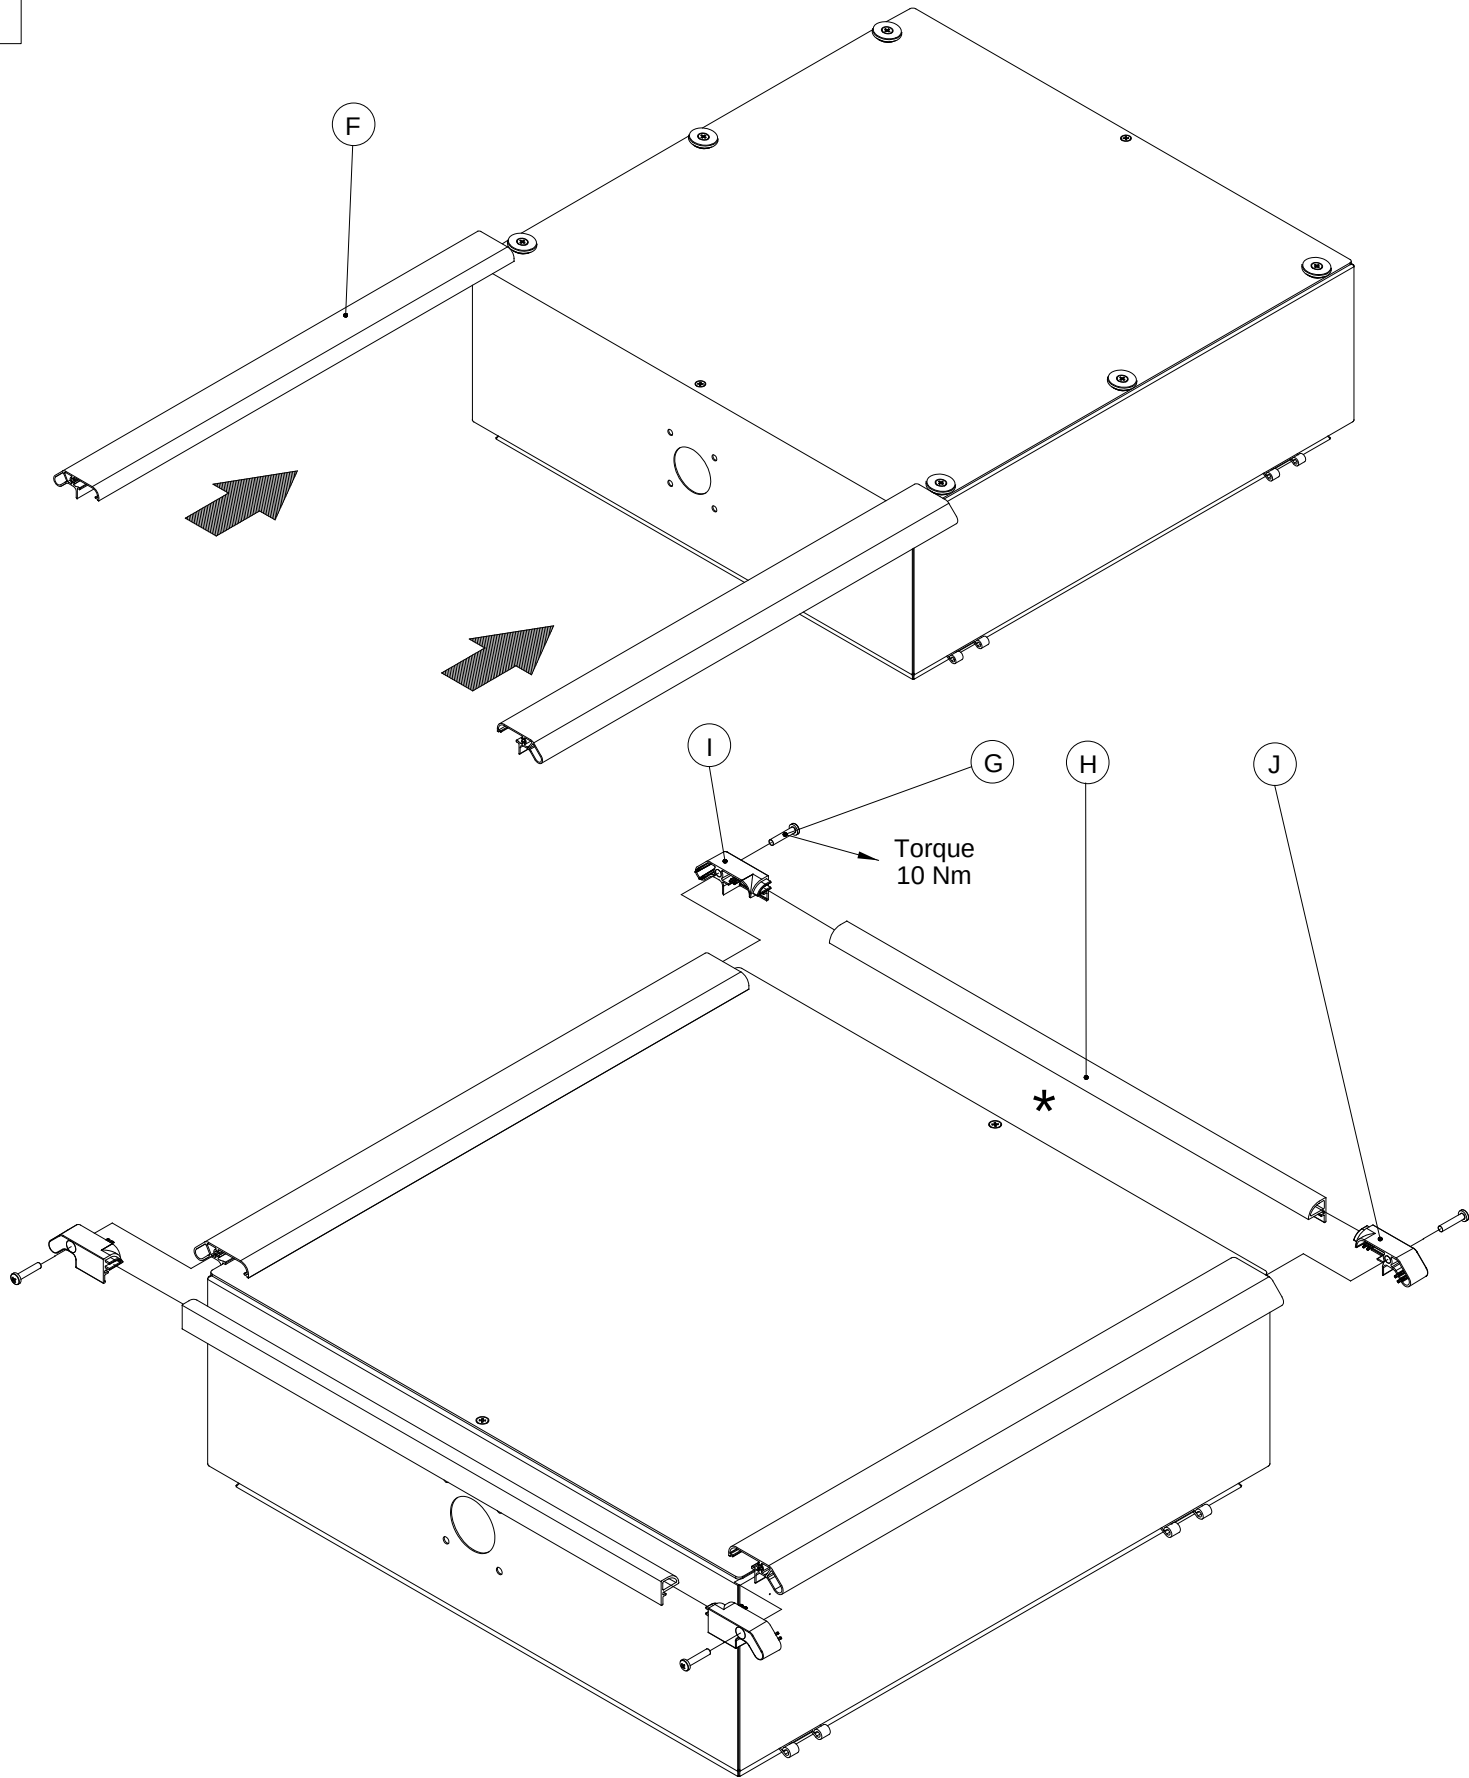



*Mount first the horizontal profile (H) with the caps (I), then fix to the aluminium profiles.

BMP / BPP-BDR





*Accessories available BMP

Ref.	Pic.	Qty.
A		4/6

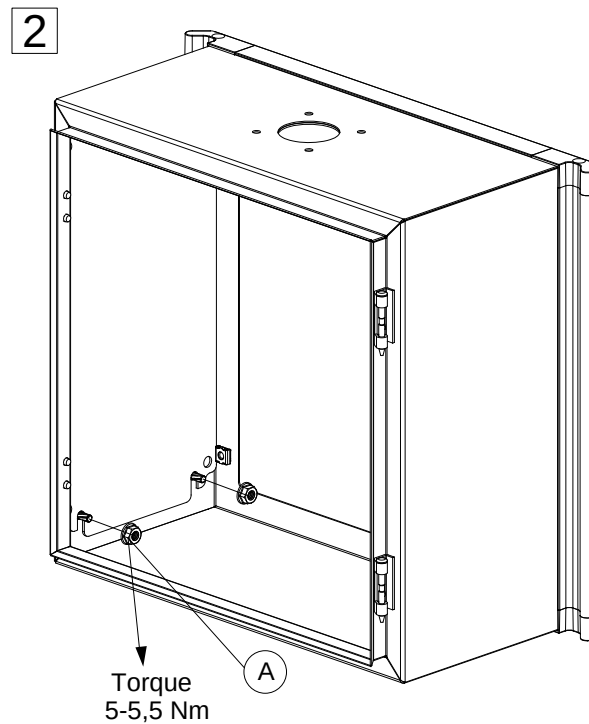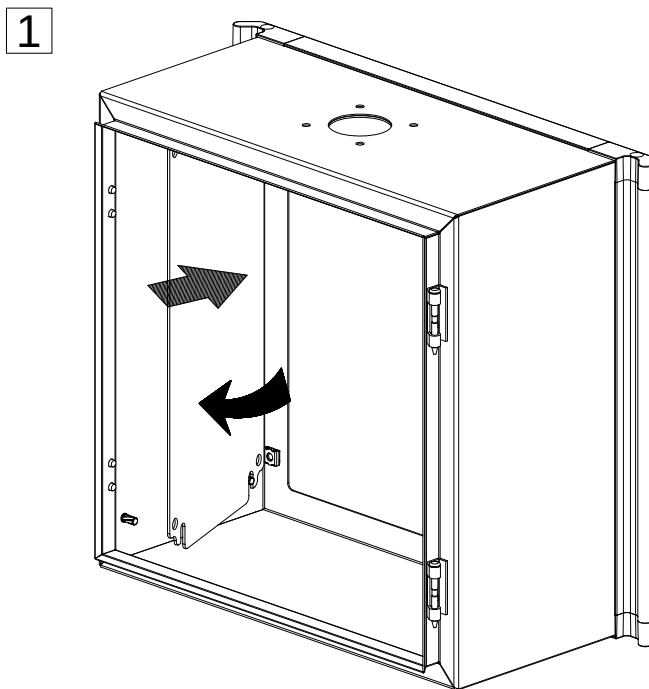

*Accessories available BPP - BDR

Ref.	Pic.	Qty.
A		4/6
B		2

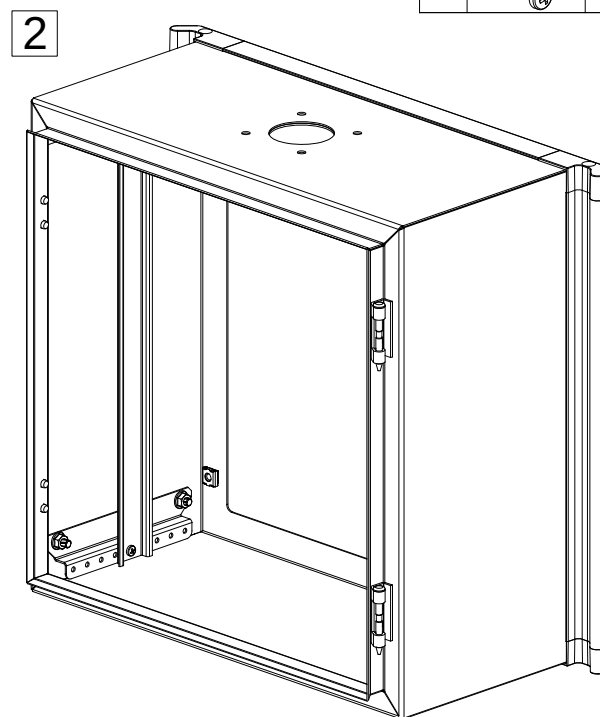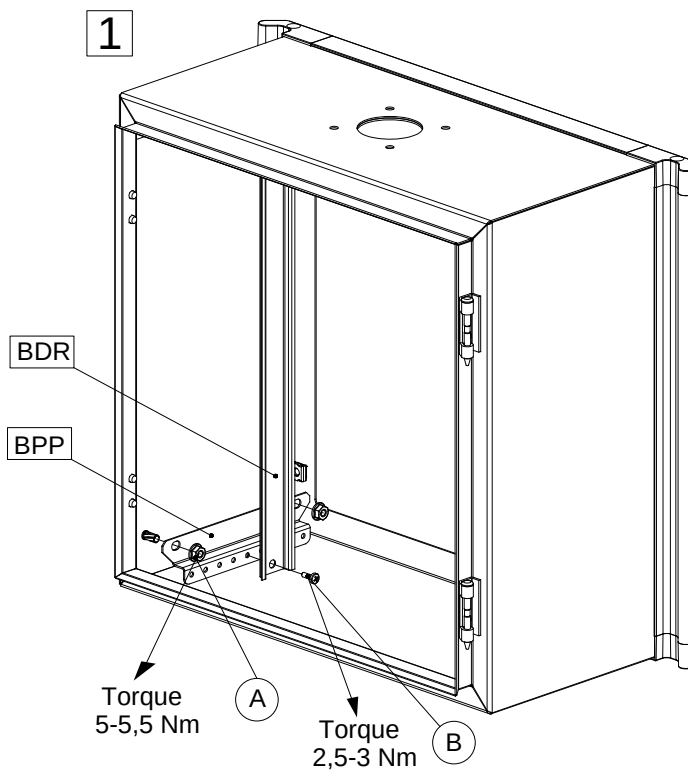



BMP

Ref.	Pic.	Qty.
A		4

*Accessories available

